


1 CHANNEL SHOWN

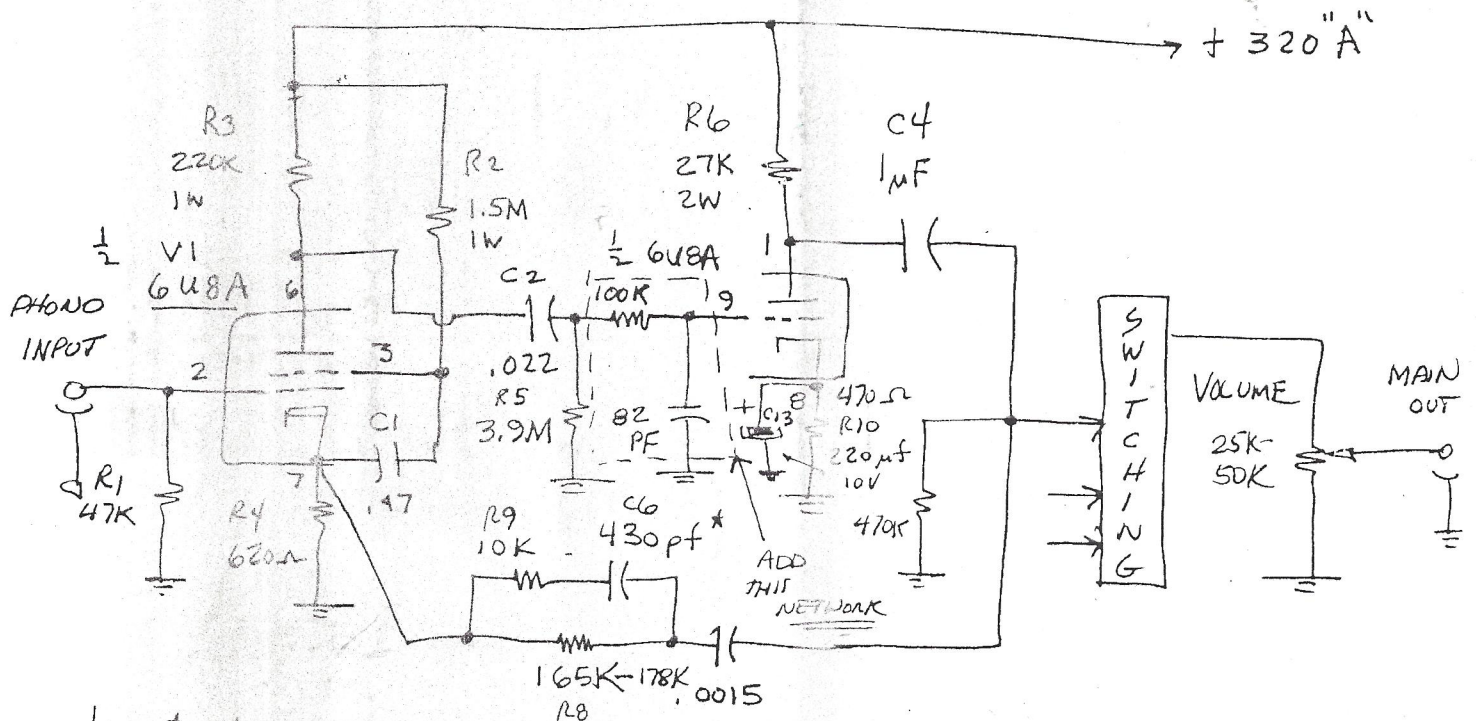

1. A CHANGE TO 390PF-400PF C5 IF NETWORK IS ADDED.
2. CHANGE .47µF, 1µF, .022µF to Polyprop.
3. CHANGE ALL 100µF CDE'S TO SPRAGUE OR SOME OTHER RELIABLE ELECTROLYTICS

POWER SUPPLY

